




UTStarcom CDM8945vw Logic Board Replacement

Replacing the logic board.

Written By: Bilal

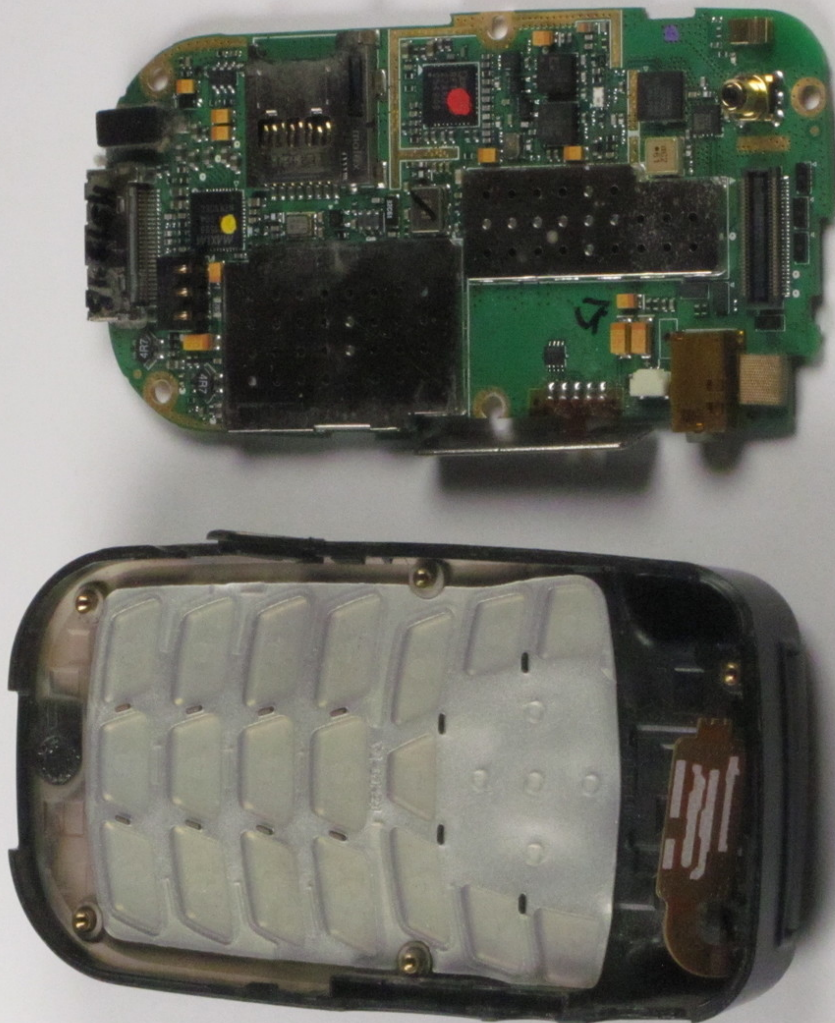

INTRODUCTION

Follow this guide to properly replace the logic board.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery



- Push the highlighted button in the direction in which the antenna is pointing. The battery will release and pop up.

Step 2



- Remove the battery.

Step 3 — Antenna




- Identify the antenna. It is the extendable plastic component pictured here.

Step 4



- Twist the base in a counter-clockwise motion to unscrew the antenna.

Step 5

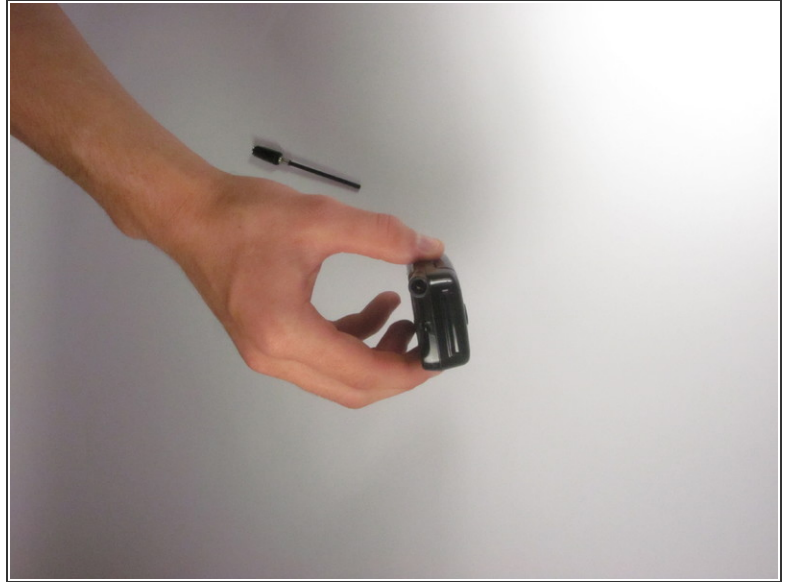

- The antenna should slide right out of the phone when finished.

Step 6 — Speaker



- Remove the small rubber grommet using a plastic opening tool as shown.

Step 7



- Unscrew all five of the highlighted screws using a Phillips #00 Screwdriver.

Step 8




- Use a plastic opening tool to separate the two pieces that form the outer case of the phone.
- Caution: prying the two pieces apart may be difficult.

Step 9




- Remove the posterior piece of the outer case.

Step 10

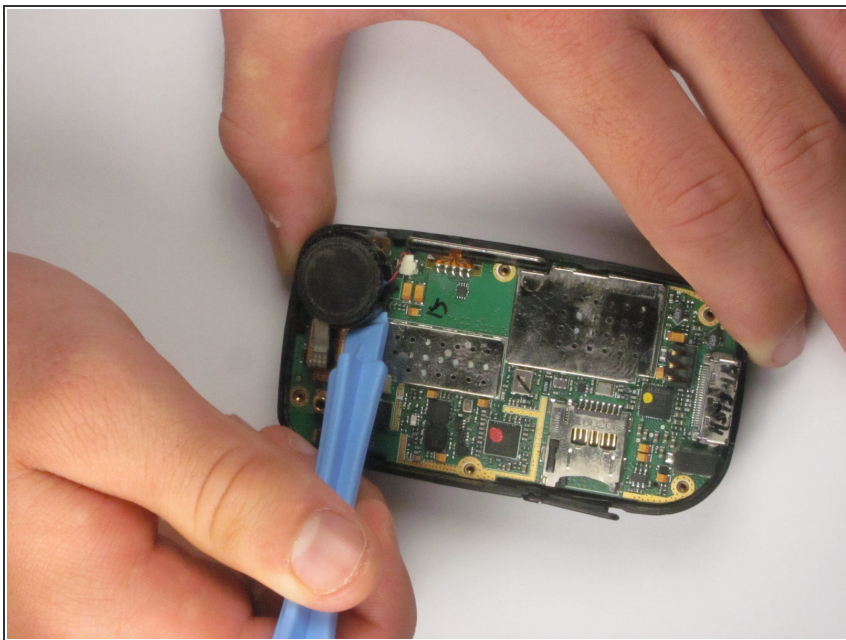


- Remove the speaker using a plastic opening tool.

Step 11

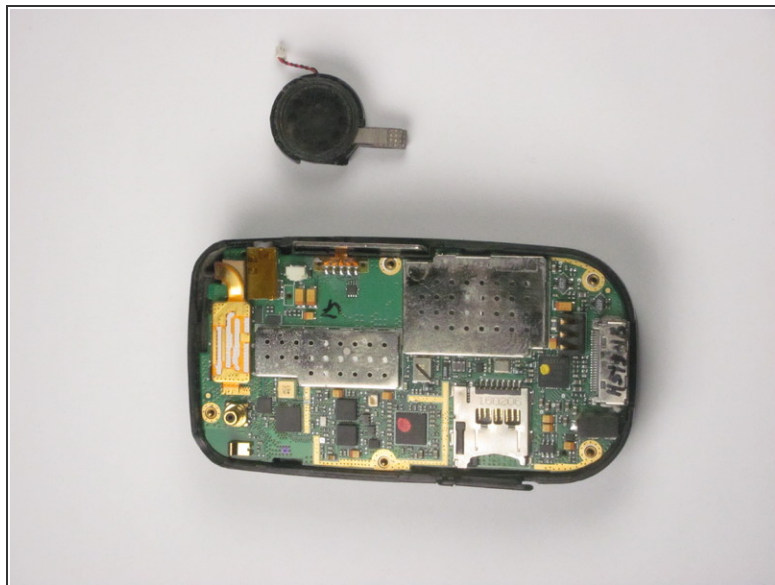



- Remove the wire attached to the speaker from the logic board using tweezers.

Step 12 — Logic Board

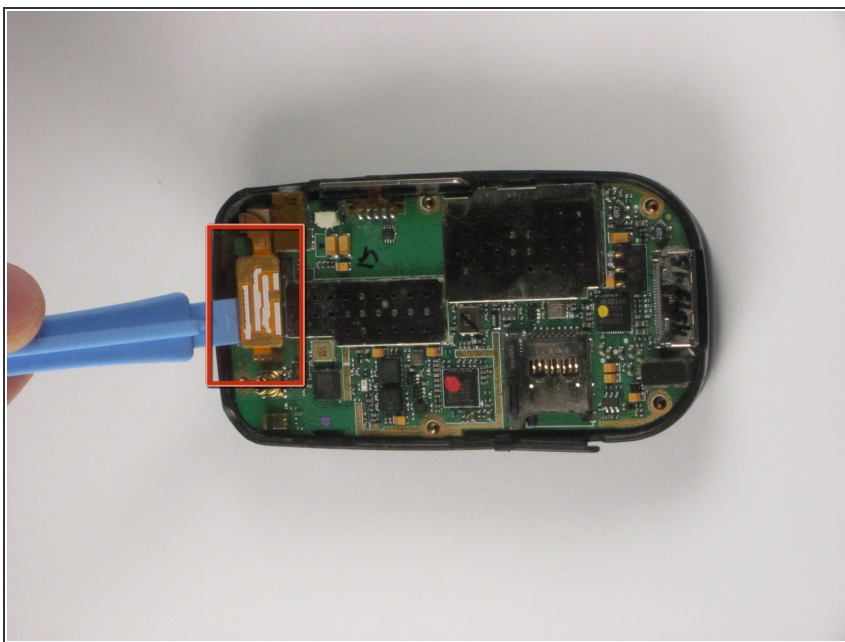

- Detach the highlighted piece from the logic board using a plastic opening tool.

Step 13

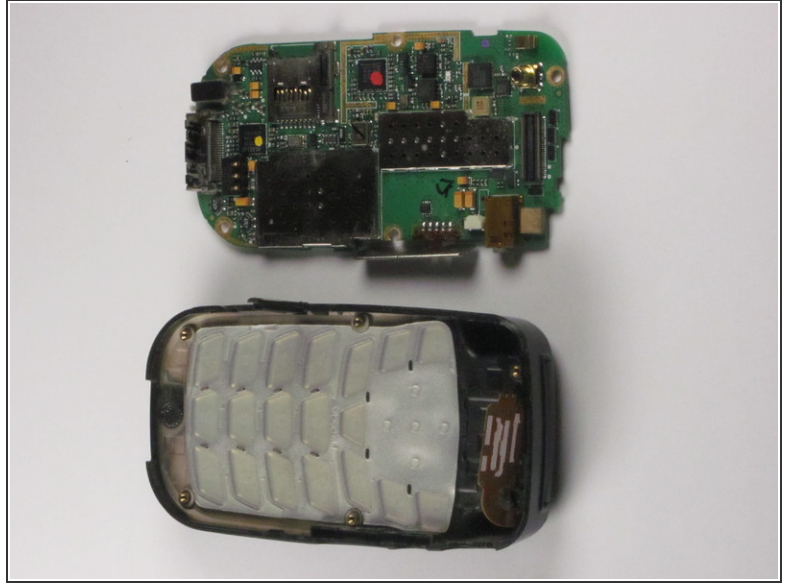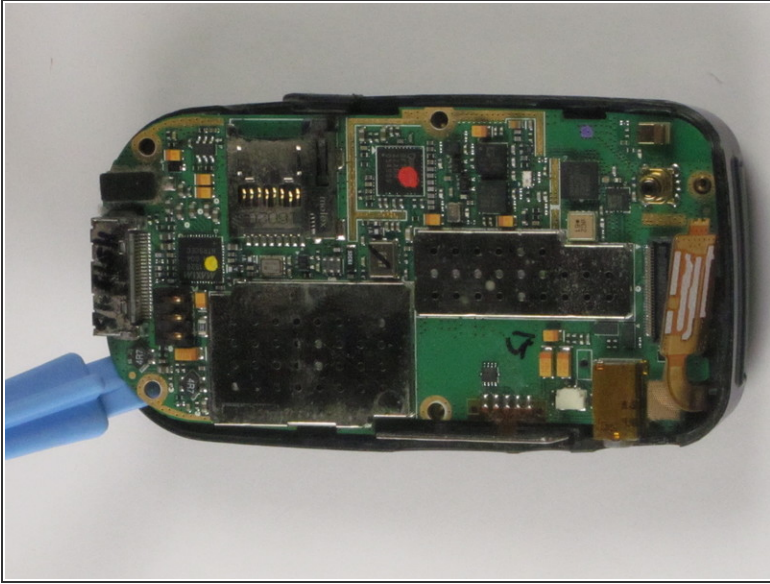

- Remove the logic board from the anterior piece of the outer case using the plastic opening tool.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 11:59:20 AM.